

TruckX ELD One Driver Manual

+1 (650) 600-0008 I www.TruckX.com



Index

App Installation	3	ELD Co
New Driver Sign Up	4	ELD Di
Driver Login	5	Unassi
Logbook Dashboard	6	HOS V
ELD Installation	7	Add Co
Connect to ELD Device	8	Review
Driving with TruckX ELD	11	Admin
Switch Duty Status	12	Submit
Disconnect from Vehicle	13	DOT In

ELD Connection Failure	14
ELD Diagnostic Events	15
Unassigned Drive Time	16
HOS Violations	17
Add Co-Driver	18
Review & Sign Logbook	19
Admin Log Edits	21
Submit DVIR	22
DOT Inspection	23

App Installation

- Once your fleet administrator has registered you as a driver, you will receive an SMS notification with a link to download the TruckX Driver App
- Your mobile device must have Bluetooth Connectivity. You can use most iOS and Android smartphones and tablets
- Download the TruckX Driver Application from the Google Play Store (Android) or Apple Store (iOS device)



New Driver Sign Up

- You will receive an SMS message with the your TruckX verification code
- Enter the 4-Digit Verification PIN on the new screen, create and confirm your 5-Digit Login PIN
- Tap 'Set PIN' once the PIN Reset confirmation message appears, tap 'Continue'
- TruckX will synchronize and set up your data on your mobile device

9:41 .ul 🕆 🔳	9:41 .il 🕆 🔳	9:41 all 🗢 🖿
\odot	\odot	0
Enter Verification PIN Please enter the 4-digit verification PIN that you received via text message (SMS). 2 5 9 9 Resend OTP	Create Login PIN Please create your own login PIN for future logins. New Login PIN 12345 Confirm New PIN 12345	Create Login PIN Please create your own login PIN for future logins. New Login PIN 12345 Confirm New PIN 12345
Submit	Create PIN	PIN Reset Successful www.executions.com You have successfully reset your PIN. Your new PIN for future logins is 12345 Okay

Driver Login

- As an existing Driver, open the TruckX Driver App on your mobile device
- Enter your registered mobile number, US DOT, and tap 'Continue'
- Enter your 5-Digit PIN and tap 'Login'
- TruckX will synchronize and set up your logbook data on your mobile device

9:41		.ul ≎ ■
Driver	Login	
Registered N	Iobile Number	
👙 +1 🗸	(777) 777-7777	
US DOT Num	nber	
3705		
	Continue	
	Need Help?	
SUDD	Contact TruckX 24/7 at	0-0008
a	nd live chat at www.TruckX.	com
By usin	ng TruckX ELD One, I agree t	o TruckX
Tern	ns & Conditions and Privacy	Policy.

Logbook Dashboard

- Once signup is complete and your data has been synched, the TruckX Logbook Dashboard will launch
- At the top, it shows your name and ELD Connection Status
- Below this, you can find your current Duty Status and a tile with your current HOS information
- The section underneath shows today's Logbook graph
- At the bottom, you can find the navigation menu



ELD Installation

- If needed, order additional TruckX ELD devices on <u>www.TruckX.com</u>
- Plug the device it into the diagnostic port of your Vehicle (if needed, use a complementary TruckX ELD PIN adaptor for different connector types)
- When the device is powered for the first time, the red LED light will flash in a 5-blink sequence and then remain ON until the device completes it initialization process within 1-3 minutes
- The green LED light indicates that the device is running normally



Connect to ELD Device (1)

- On the TruckX Logbook Dashboard, tap on the Connection Status button. You will be asked to confirm your Vehicle and Co-Driver details.
- The TruckX Driver App will search for nearby TruckX ELD devices
- If unable to digitally locate the desired device, please move closer to the diagnostic port, ensure the device is working properly by showing a green LED light and try to connect again



Connect to ELD Device (2)

- Select the correct vehicle from the list of available Devices by tapping 'Connect'
- The TruckX Driver App will connect to the device via Bluetooth
- Once successfully connected, the connection section on your Logbook Dashboard will turn green and the connected vehicle will be displayed
- If the connection fails, please make sure to stay close to the diagnostic port and try again



Connect to ELD Device (3)

- If the newly connected Vehicle VIN number differs from the Vehicle previously assigned to you, the TruckX Driver App will be automatically updated
- Please check to ensure you are connected to and driving the correct vehicle



Driving with TruckX ELD One

- Start driving your Vehicle with the TruckX Driver App connected to the vehicle's ELD One device
- As soon as your speed reaches more than 5 mph, your Duty Status automatically switches to 'DRIVING'
- When the vehicle is stopped for more than 3 minutes, your duty status will automatically switch to 'ON DUTY'



Switch Duty Status

- On the Logbook Dashboard, tap on the blue 'Change' icon next to your current duty status. The 'Change Status' menu will open, with your current Duty Status highlighted
- Tap on the available Duty Status you would like to switch to (Yard and Personal may be disabled by your Fleet Admin)
- Add an optional comment or select a standard note and tap 'Update'. Your Status tile on the Logbook Dashboard will now be updated to the new status



Disconnect from Vehicle

- On the Logbook Dashboard, tap on the green tile with your ELD connection Status
- Tap 'Disconnect'
- When successfully disconnected, your Status tile will switch to red and state 'Disconnected'



ELD Connection Failure

- If your mobile device had lost bluetooth connection with the ELD device, the status tile on the Logbook Dashboard will be red and state 'DISCONNECTED'
- To check, click on this tile: If no longer connected, the TruckX Driver App will search for available ELD devices
- Reconnect to the correct TruckX ELD One device



ELD Malfunction & Diagnostic Events

- When an ELD Malfunction or Diagnostic Event is detected, as soon as your vehicle is no longer in motion, the TruckX Driver App will trigger a notification
- A circled exclamation mark will remain in the top right corner of your Logbook Dashboard as long as any events remain active
- Tap on the exclamation mark to view event details and if applicable, complete required resolution steps: Generally notify your Fleet Admin, review your logs and manually enter missing data
- If the event resolves on its own, you will be notified accordingly



Unassigned Drive Time

- If the TruckX AI Algorithm detects an Unassigned Driving Event that is likely associated with your account, you will receive a notification about the driving event
- You can either tap 'Reject' if it was not you along with and explanation, or tap 'Accept' and your Logbook will be updated accordingly
- Alternatively, you can opt to 'Respond Later' and the same notification will launch when re-opening the TruckX Driver App



HOS Violations & Notifications

- As you approach an HOS limit, the TruckX Driver App launches a series of reminders and warnings to alert you of the upcoming HOS violation
- In case of an HOS violation, you will receive a push notification that automatically closes while in driving mode
- On the Logbook Home Screen, you will see the 'Violation' icon on the associated Log Graph where time under violation will be marked in red. Click on the Log graph and you will see further details about the violation



Add Co-Driver

- To add a Co-Driver, open the 'More' page from the TruckX Driver App Menu
- Tap 'Manage Co-Driver(s)'. Hand your mobile device over to the co-driver you want to add and ask them to follow the instructions to log in to the shared driving session
- Once added, both the current driver and Co-Driver will be displayed on the Logbook Dashboard and can be switched any time via the 'More' page



Review Daily Logbook

- To open your Daily Logs page, tap on 'Logs' in the TruckX Driver App Menu
- Review your logbook entries, duty status duration, start odometer and engine hours. You can click on the 'Edit' icon to edit your logs in accordance with FMCSA rules
- Navigate the tabs at the top of the page to access and edit your vehicle and trip documents, access the DVIR Workflow and Sign the Day's Logs



Sign Daily Logbook

- In order to sign your daily logs, tap the 'Sign' button on the logbook graph of daily logs that are missing your signature
- Alternatively, you can tap the 'Sign' tab on the 'Logs' page
- Using your finger, draw your signature in the entry field and tap 'Submit'
- Once signed, the 'Sign' button on the respective logbook graph will turn to 'Signed'



Accept / Reject Log Edits

- When your Administrator makes any changes to your Logs in accordance with FMCSA Rules, you will receive a notification when exiting the Driving Mode
- Review the suggested change in detail:
 - To accept the proposed edit, tab 'Accept' and your logs will be updated accordingly together with an edit annotation
 - To reject the proposed edit, tab 'Reject' and provide an explanation of why the suggested change is incorrect. Once rejected, there will be no change to your logs



Submit DVIR

- To submit a new DVIR, open the 'Logs' page via the TruckX Driver App menu, and select the 'DVIR' tab
- Tap 'Add DVIR', then follow the instructions to select the Prevs. Post-Trip DVIR type and asset for which you would like to submit the report
- If any pre-existing defects are unresolved, they will be automatically listed. You can add walkaround images and defects, then sign and submit



Start DOT Inspection

- To begin a DOT inspection, tap on 'More' in TruckX Driver App menu
- Tap on the first tile named 'DOT Inspection'
- Tap 'Start' to begin Inspection and hand your mobile device over to the inspecting Officer

9:41	■ \$ III.	9:41 ()
More	!	More ①
Dan Smith	>	Dan Smith >
Manage Co-Driver(s)		Manage Co-Driver(s)
DOT Inspection	>	DOT Inspection
My Assets	>	My Assets
따 My Workflows	>	마다 My Workflows >
Forms	>	Forms >
Exemptions	>	(!) Exemptions
Cycle	>	DOT Inspection 🛞
Carrier Info	>	Please hand your mobile device to the Officer. Tap 'Start ' to begin DOT Inspection.
Home Logs Chats	More	Start

Show Inspection Report

- Once the DOT Inspection has been started, enter the DOT Inspection Mode by tapping 'Inspect'
- On the Inspection Page, the officer can either tap 'View' to visually inspect the last 7 days' logs, conduct an FMCSA transfer, print or send the logs via Email
- Tap 'Exit Inspection' to return to regular ELD mode

9:41		9:41	0	■ \$ III.	9:41			0	alls	
More	!	DOT Insp	pection Mod	e	\odot	Inspe	ectio	on Rep	port	
		FMCSA Data Transf	fer				Auç	g 20	\odot	
Dan Smith DOT: 3705	>	Send last 7 days Logs system	to FMCSA/DOT e	RODS	Driver's USA 60 F	Daily Log iour/7 day (Inte	erstate)	Aug 2	20, 2023
		Trop	oofor Logo		Driver	Dan Smith		Co-Driver	Adam Lewi	is
Manage Co-Driver(s)		ITal	ISTEL LOGS		DL#	123456703		DL State	CA	
					Driver ID	a81435-728c	-7d8a	Co-Driver	ID h81447-15	8d-6d2q
DOT Inspection	>	View & Share Logs			US DOT	124556677		Time Zon	PST	
→		View Logs for the last	7 davs		ELD ID	ELD One		ELD Manufact	urer TruckX	
			,-		Trailer ID	117		Shipping	D	
┣ My Assets	>	Vi	ew Logs		Data Diagno tic Indicator	s- No		24Hr Star Time	t Midnight	
OTO My Workflows	\$				Truck Trailer ID	No		Truck Tractor VI	N 17HK90YU	TO53321
ų my nomeno		Print	En		ELD Malfur tion Indica	or No		Unidentifi Driver Rea	ed No cord No	
					Carrier	Demo Compa	ny	Miles Tod	ay 124 mi	
Inspection Documents	\otimes	TruckX ELD One is con Carrier Safety Regulat	mpliant with Fede tion 49CFR, 395.	eral Motor 22 - 395.36	Start/End Odometer	No		Start/End Engine Ho	No No	
Increation Manual	F7	Subpart B regarding d	Subpart B regarding driver's record of duty status			ver o		Start Location	Roseville, CA 41618	
Inspection Manual					Destination Location	Oakland, CA 23132		Current Location	Norcal, CA 82345	
Driver Manual						11 M 16:03 00:00 07:30 00:27				
Inspect		Exit	Inspection				R	ecap		
					01/18	01/19 01/20	01/21	01/22	01/23 01/24	01/25
					00:00 0	0:00 00:00	ud:00	00:00	Worked Teda	00:00

FMCSA Transfer

- To initiate an FMCSA Data Transfer of the last 7 days' logs to FMCSA/DOT eRODS system, tap 'Transfer Logs'
- Enter a file comment and select whether to transfer via Web or Email mode, then tap 'Send'

9:41 .ul 🗢 🖿	9:41 ()
DOT Inspection Mode	DOT Inspection Mode
FMCSA Data Transfer Send last 7 days Logs to FMCSA/DOT eRODS system	FMCSA Data Transfer Send last 7 days Logs to FMCSA/DOT eRODS system
Transfer Logs	Transfer Logs
View & Share Logs View Logs for the last 7 days	View & Share Logs View Logs for the last 7 days
View Logs	View Logs
Print Email	Print Email
TruckX ELD One is compliant with Federal Motor Carrier Safety Regulation 49CFR, 395.22 - 395.36	TruckX ELD One is compliant with Federal Motor
Subpart B regarding driver's record of duty status	Send Logs 🛞
	Enter File Comment * Inspection#12
	Transfer Mode
	Web Services Email
Exit Inspection	Send

Email / Print Inspection Report

- To email the last 7 days' logs, tap 'Email'. Enter the recipient's name and email address, then tap 'Send'
- To print the last 7 days' logs, tap 'Print'. This will open the the PDF print view from where you can connect to a nearby printer and print the file

9:41	9:41 ()
DOT Inspection Mode	DOT Inspection Mode
FMCSA Data Transfer Send last 7 days Logs to FMCSA/DOT eRODS system	FMCSA Data Transfer Send last 7 days Logs to FMCSA/DOT eRODS system
Transfer Logs	Transfer Logs
View & Share Logs View Logs for the last 7 days	View & Share Logs View Logs for the last 7 days
View Logs	View Logs
Print Email	Print Email
TruckX ELD One is compliant with Federal Motor Carrier Safety Regulation 49CFR, 395.22 - 395.36 Subpart B regarding driver's record of duty status	Email Logs
	Full Name *
	Max Payne
	Email Address *
	max20001@gmail.com
Exit Inspection	Send

Best ELD & Fleet Management Platform



Support@TruckX.com

www.TruckX.com